



SPRING RETURN DAMPER ACTUATORS (5 Nm)

DANx

FUNCTION

On / Off spring return damper control.
The actuator opens the damper loading the return spring; with current cut-off the spring moves the damper in a safe position.

APPLICATIONS

Well-suited for applications with security dampers used as anti-freeze, antismoke or for sealing in the hygienic-sanitary field.

TYPE	POWER SUPPLY	SIGNAL CONTROL
DAN24F	24 V AC/DC	On/Off
DAN24FS	24 V AC/DC	On/Off
DAN230F	230 V AC	On/Off
DAN230FS	230 V AC	On/Off

S models with 2 fixed auxiliary switches


Actuator	DAN24F	DAN230F
Damper area (*)	1.0 m ²	1.0 m ²
Torque	5 Nm	5 Nm
Power supply	24 V AC/DC	230 V AC
Frequency	50...60 Hz	50...60 Hz
Power consumption		
- operating	7.2 W	4.2 W
- at the end stops	2.5 W	2.5 W
For wire sizing	10.0 VA	10.0 VA
Connection motor	1 m, 2 x 0,75 mm ²	1 m, 2 x 0,75 mm ²
Connection auxiliary switches	1 m, 6 x 0,5 mm ²	1 m, 6 x 0,5 mm ²
Aux. switches rating (2 x SPDT)	3(1.5) A 230 V AC	3(1.5) A 230 V AC
Running time		
- motor	50...70 s	50...70 s
- spring back	< 20 s	< 20 s
Noise level	< 45 dB (A)	< 45 dB (A)
Weight	1800 g	1900 g
Control signal	On/Off	On/Off
Rotation angle		
- operating	90° (95° mechanical)	90° (95° mechanical)
- limitation	5...85° in 5° steps	5...85° in 5° steps
Direction of rotation	bidirectional	bidirectional
Protection class	II	II
Degree of protection	IP54	IP54
Room temperature	-30 ... +50° C	-30 ... +50° C
Room humidity	5...95% r.h.	5...95% r.h.
Maintenance	free	free
Standards	CE	CE

(*) the indication of the damper area is not significant, the data that must be taken into account is the value of the torque in Nm..

SPRING RETURN DAMPER ACTUATORS (5 Nm)


DANxP

DIMENSIONS (mm)

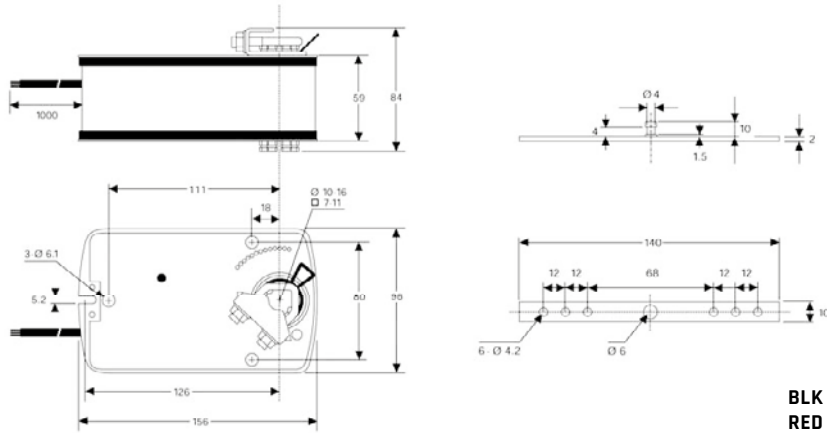


BLK - black
RED - red

Wiring diagrams

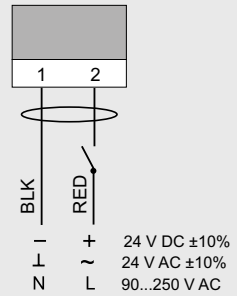


Direction of rotation setting

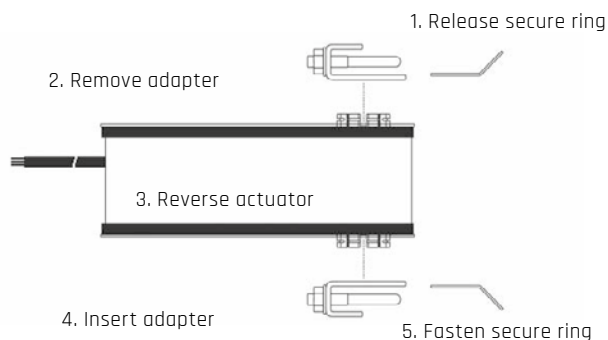

YEL - yellow
GRN - green
BLU - blue
PUR - purple
GRY - grey
WHI - white

Fixed auxiliary switches

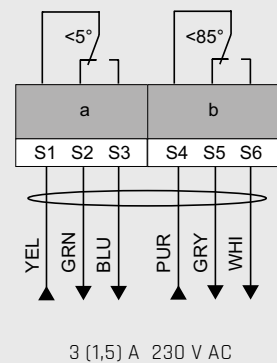

Limitation of rotation angle

For 5° to 45° (see fig. 1)

1. Loosen screw of the mechanical limiter plate.
2. Move the limiter plate to the appropriate position.
3. Tighten the screw.

For 45° to 85° (see fig. 2)

1. Release the secure ring of the adapter.
2. Remove the adapter and turn negative 45° as shown.
3. Insert adapter and secure the adapter ring.
4. Loosen screw of the mechanical limiter plate.
5. Move the limiter plate to the appropriate position.
6. Tighten the screw.

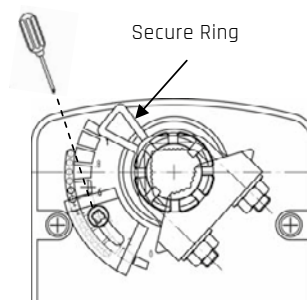


fig. 1

5° to 45° setting

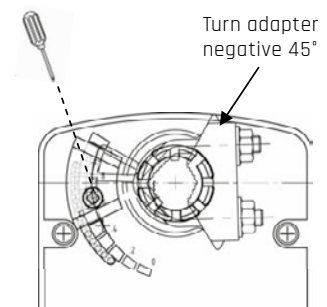


fig. 2

45° to 85° setting